

Home Owner Information Guide 17.0



Radon

Radon is an odorless, colorless radioactive gas, which is formed by the natural breakdown of uranium in soil. Radon can be found in high concentrations in rock and soil that contains granite, shale, phosphate and uranium, or even fill soil containing industrial waste.

Radon gas moves through the soil toward the earth's surface where it either safely dissipates in outdoor air or seeps into buildings through cracks and gaps in the building's foundation. Radon can also be introduced into a building or home through the water-supply, particularly if there is a private well. Certain building products, such as the stone used for a fireplace, can also be a source of radon gas.

Research indicates that once trapped inside a home, radon can accumulate to the point where it can be harmful to the occupants. Actually, it is the breakdown of radon into what is referred to as radon decay products (or radon daughters) that represents the greatest concern. These radioactive products become attached to airborne particles, which can be inhaled and ultimately cause lung tissue damage and cancer. Smokers are especially prone to the adverse effects of long-term radon exposure.

The potential for radon in any particular home is dependent on a number of variable factors such as the underlying soil composition, the type of construction materials and methods used, weather conditions, and even occupant lifestyle. Radon concerns tend to be greatest in hilly or mountainous regions, and less of an issue in sandy coastal areas. But pockets of radon-producing elements can be found almost anywhere. The U.S. Environmental Protection

Agency (www.epa.gov), Health Canada, (www.hc.sc.gc.ca) and local health departments can provide information on radon and maps identifying areas subject to radon concerns.

Radon levels may vary from season to season, day to day, or even by the hour, as pressure differences occur outside or within a structure. Dramatically different radon levels can be found in seemingly identical neighboring homes. Consequently, the only way to determine if there is a radon concern is to perform a test. While radon kits are available for consumer use, it is generally recommended that radon screening or testing be performed by a qualified radon professional, especially for real estate transactions.

Even with professional testing, it can be difficult to readily determine average annual radon levels in a particular home. Radon levels tend to become elevated when the air pressure within a house is less than that of the radon gas in the soil. This type pressure imbalance can occur with the use of certain appliances and fans, particularly in relatively airtight structures. Fuel-burning appliances that require indoor air for combustion, or draw in air for other purposes, lower indoor air pressure. This action can result in the radon gas being drawn into the building through sub-surface cracks and/or other openings.

Since radon gas is naturally occurring, it cannot be eliminated; but it can be controlled. Once the radon level in a particular house is quantified using one of several recognized radon-testing methods, steps can be taken to lower the radon level and the potential health concern.

(Continued)

housemaster.com

HouseMaster[®]

Home Inspections. Done Right.[®]

Radon (continued)

In most cases, the concentration of radon in air is used to determine the radon action level:


- In the United States, the Environmental Protection Agency has established a continuous exposure level of 4 (or more) picocuries per liter (pCi/L) as the action level.
- Health Canada has established 200 (or more) becquerels per cubic meter (Bq/m³) as the recommended action level for homes in Canada.

200 Bq/m³ (or 5.4 pCi/L) is a slightly higher level than the 4 pCi/L guideline used in the U.S.; however, it is significantly below the 800 Bq/m³ action level used in Canada until 2007.

These measurements do not necessarily represent a safe amount of radon; rather they serve to provide guidance in determining when remedial action is advisable. Radon levels in these ranges are also deemed the point to which conventional radon remediation methods can be expected to lower radon levels in a home in most cases.

There are several methods that can be used to lower radon levels. Radon mitigation systems include ventilation systems, pressurization of the basement air, and block wall ventilation. However, the most commonly used and effective radon mitigation method is sub-slab suction. This method makes use of plastic piping, installed through the floor slab of a house, basement, or even crawlspace, and a low-volume, continuously operating fan to create a negative-pressure within the piping. This draws in radon-laden air from below the house and vents it harmlessly to the exterior.

Radon levels below the action levels generally do not require any significant remedial action (subject to the specific situation or occupant concerns), as it may be difficult to achieve significantly lower levels even if a radon mitigation system is installed.

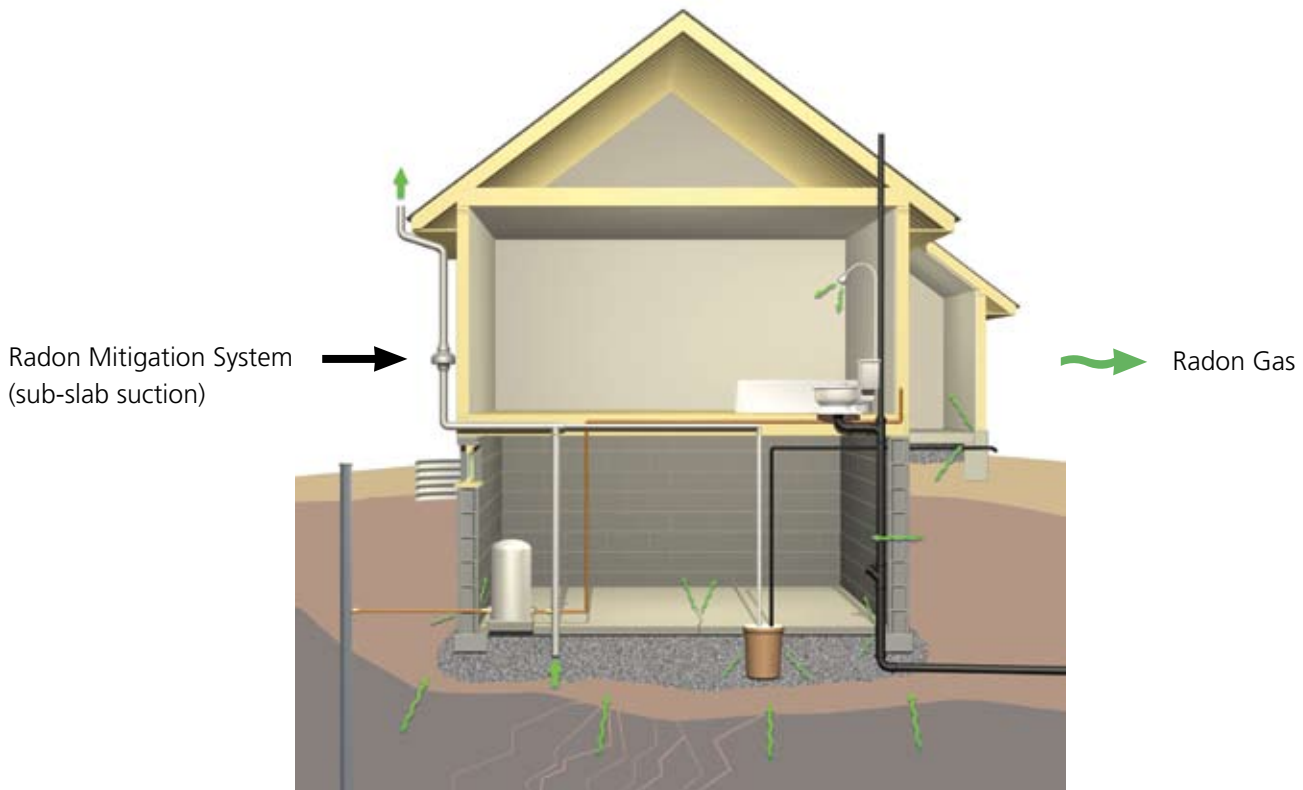

housemaster.com

This information is provided for general guidance purposes only. Neither HMA Franchise Systems, Inc. nor the local HouseMaster® franchise warrants its accuracy and assumes no liability related to its use. Contact the local franchise office and/or qualified specialists for advice pertinent to your specific house or circumstances.
© Copyright HMA 2004. Each HouseMaster franchise is an independently owned and operated business.
HouseMaster is a registered trademark of HMA Franchise Systems, Inc.

HouseMaster®

Home Inspections. Done Right.®